



Operation Manual

PRODUCT NAME

Reduced wiring system
(CC-Link compliant SI unit)

MODEL/ Series

EX12#-SMJ1 Series

SMC Corporation

Table of Contents

Safety Instructions	2
Model indication and How to Order	7
Summary of Product parts	8
Definition and terminology	10
Mounting and Installation	11
Communication wiring	11
Power supply wiring	13
Settings	13
Maintenance	17
Troubleshooting	19
Specification	23
Specifications	23
Dimensions	24

Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution", "Warning" or "Danger". They are all important notes for safety and must be followed in addition to International standards (ISO/IEC), Japan Industrial Standards (JIS)^{*1)} and other safety regulations^{*2)}.

*1) ISO 4414: Pneumatic fluid power - - General rules relating to systems.
ISO 4413: Hydraulic fluid power - - General rules relating to systems.
IEC 60204-1: Safety of machinery - -Electrical equipment of machines. (Part 1: General requirements)
ISO 10218-1992: Manipulating industrial robots -Safety.
JIS B 8370: General rules for pneumatic equipment.
JIS B 8361: General rules for hydraulic equipment.
JIS B 9960-1: Safety of machinery - Electrical equipment of machines. (Part 1: General requirements)
JIS B 8433-1993: Manipulating industrial robots - Safety.
etc.

*2) Labor Safety and Sanitation Law, etc.



Caution : CAUTION indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.



Warning : WARNING indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.



Danger : DANGER indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.

1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.

1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.
3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries. If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.
If anything is unclear, contact your nearest sales branch.

Limited warranty and Disclaimer/Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".

Read and accept them before using the product.

Limited warranty and Disclaimer

1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered. ^{*3)}
Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided.
This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.

*3) Vacuum pads are excluded from this 1 year warranty.

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered.

Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

When the product is exported, strictly follow the laws required by the Ministry of Economy, Trade and Industry (Foreign Exchange and Foreign Trade Control Law).

Operator

- ◆ This operation manual has been written for those who have knowledge of machinery and apparatus that use pneumatic equipment and have full knowledge of assembly, operation and maintenance of such equipment.
- ◆ Please read this operation manual carefully and understand it before assembling, operating or providing maintenance to the product.

■Precautions



Warning

- Do not disassemble, modify (including changing the printed circuit board) or repair.
An injury or failure can result.
- Do not operate the product outside of the specifications.
Do not use for flammable or harmful fluids.
Fire, malfunction, or damage to the product can result.
Verify the specifications before use.
- Do not operate in an atmosphere containing flammable or explosive gases.
Fire or an explosion can result.
This product is not designed to be explosion proof.
- If using the product in an interlocking circuit:
 - Provide a double interlocking system, for example a mechanical system.
 - Check the product regularly for proper operation.Otherwise malfunction can result, causing an accident.
- The following instructions must be followed during maintenance:
 - Turn off the power supply.
 - Stop the air supply, exhaust the residual pressure and verify that the air is released before performing maintenance.Otherwise an injury can result.

Caution

- After maintenance is complete, perform appropriate functional inspections.
Stop operation if the equipment does not function properly.
Safety cannot be assured in the case of unexpected malfunction.
- Provide grounding to assure the safety and noise resistance of the Serial System.
Individual grounding should be provided close to the product with a short cable.

■ NOTE

- Follow the instructions given below when designing, selecting and handling the product.
- The instructions on design and selection (installation, wiring, environment, adjustment, operation, maintenance, etc.) described below must also be followed.
- * Product specifications
 - The direct current power supply to combine should be UL1310 Class2 power supply when conformity to UL is necessary.
 - The SI unit is a  approved product only if they have a  mark on the body.
 - Use the specified voltage.
Otherwise failure or malfunction can result.
 - Reserve a space for maintenance.
Allow sufficient space for maintenance when designing the system.
 - Do not remove any nameplates or labels.
This can lead to incorrect maintenance, or misreading of the operation manual, which could cause damage or malfunction to the product.
It may also result in non-conformity to safety standards.
- Product handling
- * Installation
 - Do not drop, hit or apply excessive shock to the fieldbus system.
Otherwise damage to the product can result, causing malfunction.
 - Tighten to the specified tightening torque.
If the tightening torque is exceeded the mounting screws may be broken.
 - Never mount a product in a location that will be used as a foothold.
The product may be damaged if excessive force is applied by stepping or climbing onto it.
- * Wiring
 - Avoid repeatedly bending or stretching the cables, or placing heavy load on them.
Repetitive bending stress or tensile stress can cause breakage of the cable.
 - Wire correctly.
Incorrect wiring can break the product.
 - Do not perform wiring while the power is on.
Otherwise damage to the fieldbus system and/or I/O device can result, causing malfunction.
 - Do not route wires and cables together with power or high voltage cables.
Otherwise the fieldbus system and/or I/O device can malfunction due to interference of noise and surge voltage from power and high voltage cables to the signal line.
Route the wires (piping) of the fieldbus system and/or I/O device separately from power or high voltage cables.
 - Confirm proper insulation of wiring.
Poor insulation (interference from another circuit, poor insulation between terminals, etc.) can lead to excess voltage or current being applied to the product, causing damage.
 - Take appropriate measures against noise, such as using a noise filter, when the fieldbus system is incorporated into equipment.
Otherwise noise can cause malfunction.

*Environment

- Select the proper type of protection according to the environment of operation.
In case of IP20, avoid use in the place where water and oil scatter.
- Do not use the product in an environment where corrosive gases or fluids could be splashed.
Otherwise damage to the product and malfunction can result.
- Do not use in an area where surges are generated.
If there is equipment which generates a large amount of surge (solenoid type lifter, high frequency induction furnace, motor, etc.) close to the fieldbus system, this may cause deterioration or breakage of the internal circuit of the fieldbus system. Avoid sources of surge generation and crossed lines.
- When a surge-generating load such as a relay or solenoid is driven directly, use an fieldbus system with a built-in surge absorbing element.
Direct drive of a load generating surge voltage can damage the fieldbus system.
- The product is CE marked, but not immune to lightning strikes. Take measures against lightning strikes in the system.
- Prevent foreign matter such as remnant of wires from entering the fieldbus system to avoid failure and malfunction.
- Mount the product in a place that is not exposed to vibration or impact.
Otherwise failure or malfunction can result.
- Do not use the product in an environment that is exposed to temperature cycle.
Heat cycles other than ordinary changes in temperature can adversely affect the inside of the product.
- Do not expose the product to direct sunlight.
If using in a location directly exposed to sunlight, shade the product from the sunlight.
Otherwise failure or malfunction can result.
- Keep within the specified ambient temperature range.
Otherwise malfunction can result.
- Do not operate close to a heat source, or in a location exposed to radiant heat.
Otherwise malfunction can result.

*Adjustment and Operation

- Set the switches by using a sharp-pointed screwdriver etc.
It may damage set switches.
- Perform settings suitable for the operating conditions.
Incorrect setting can cause operation failure.
For details of each setting, refer to page 14 of this manual.
- Please refer to the PLC manufacturer's manual etc. for details of programming and addresses.
For the PLC protocol and programming refer to the relevant manufacturer's documentation.

*Maintenance

- Turn off the power supply, stop the supplied air, exhaust the residual pressure and verify the release of air before performing maintenance.
There is a risk of unexpected malfunction.
- Perform regular maintenance and inspections.
There is a risk of unexpected malfunction.
- After maintenance is complete, perform appropriate functional inspections.
Stop operation if the equipment does not function properly.
Otherwise safety is not assured due to an unexpected malfunction or incorrect operation.
- Do not use solvents such as benzene, thinner etc. to clean the each unit.
They could damage the surface of the body and erase the markings on the body.
Use a soft cloth to remove stains.
For heavy stains, use a cloth soaked with diluted neutral detergent and fully squeezed, then wipe up the stains again with a dry cloth.

Model indication and How to Order

- SI unit series EX120

EX120-SMJ1

• Communication protocol, output points


MJ1	CC-Link, 16 points NPN output (Positive common)
-----	---

• Valve interface


EX120	Plug-in
EX121	Flat ribbon cable DIN rail mounting
EX122	Plug-in DIN rail mounting
EX124U	Enclosure IP65 Mount a unit to the U side of the manifold
EX124D	Enclosure IP65 Mount a unit to the D side of the manifold
EX126D	Enclosure IP67 Mount a unit to the D side of the manifold

Summary of Product parts


•EX120-SMJ1

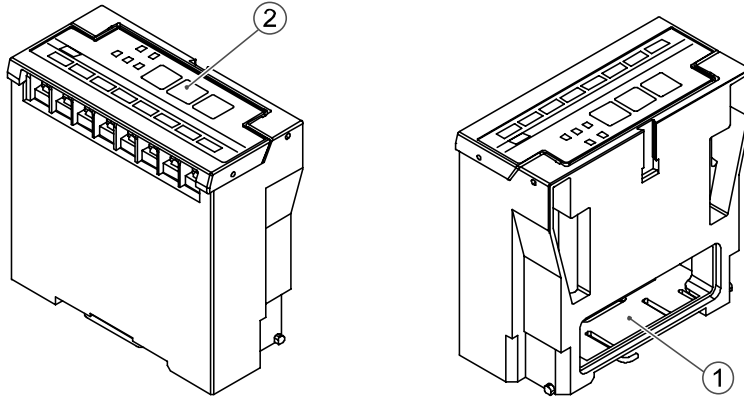


•EX121-SMJ1

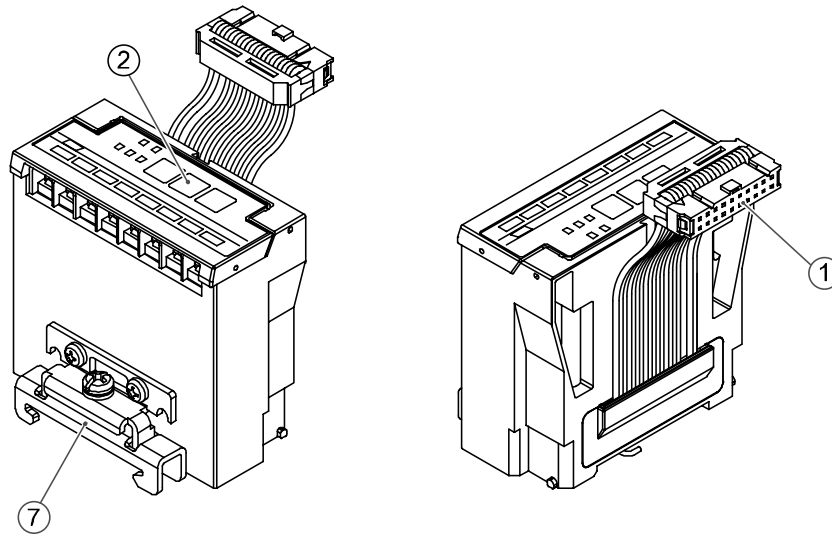


•EX122-SMJ1

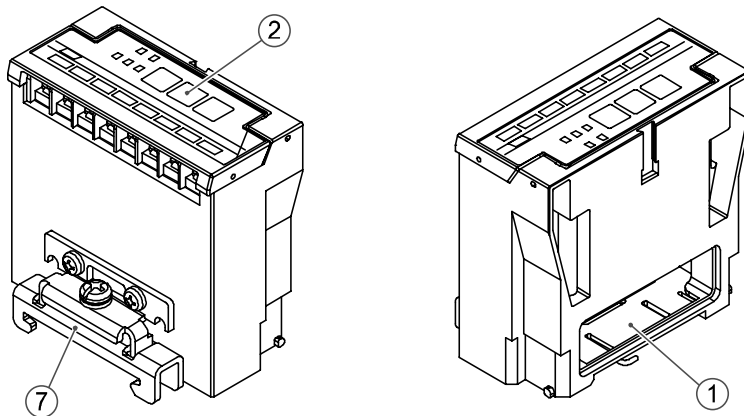


•EX124D/U-SMJ1

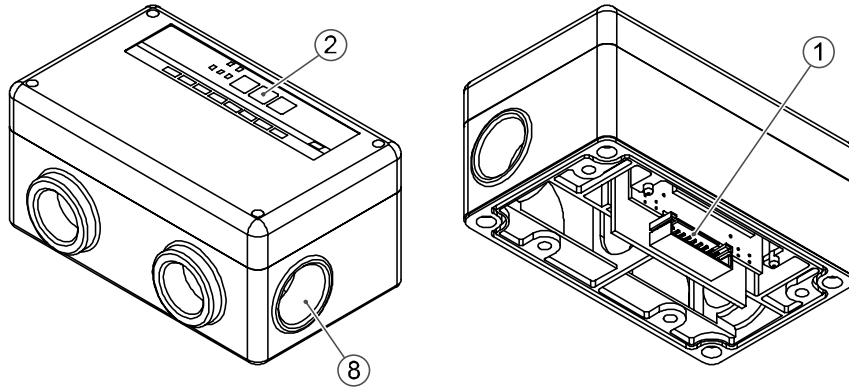

•EX126D-SMJ1

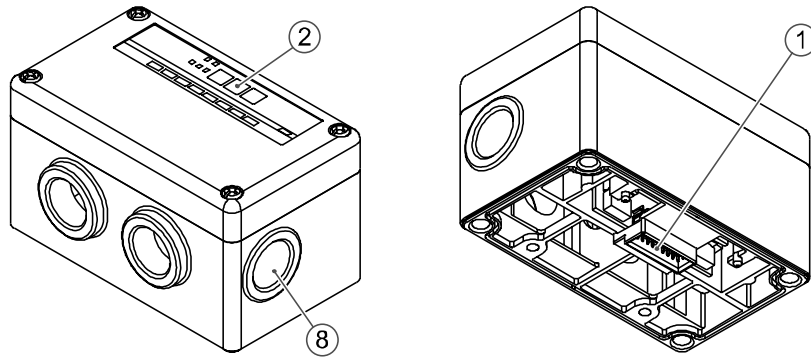

•Terminal block (When opening the switch cover)

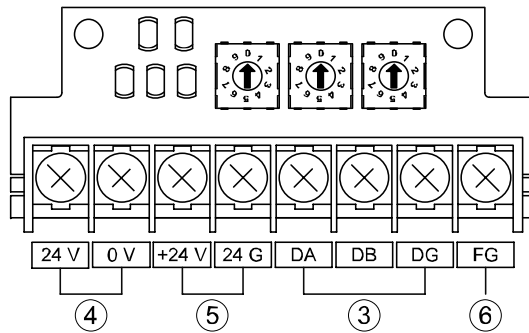

No.	Element	Description
1	Output connector	Output signal interface for vale manifold.
2	LED and switch cover	Bus status-specific and SI unit-specific LEDs. Switches for setting of station number and transmitting speed.
3	Communication terminal (DA,DB,DG)	To connect the CC-Link line with a CC-Link-dedicated cable.
4	Power supply terminal (24 V, 0 V)	Power supply for solenoid valve.
5	Power supply terminal (+24 V, 24 G)	Power supply for communication.
6	FG terminal	Used for functional ground and connecting the CC-Link-dedicated cable's shield line.
7	DIN rail mounting bracket	For mounting to a DIN rail.
8	Conduit port	Use for wiring to the terminal inside the SI unit with the CC-Link-dedicated cable and the power supply cable. Use the dripproof plug assembly (P/N: AXT100-B04A) for the unused conduit port (G1/2)

■Definition and terminology

No.	Term	Definition
1	Total of station	Total number of occupied stations among all slaves connected by the CC-Link.
2	Station number	Numbers from 1 to 64, assigned to the slave stations. No. 0 is assigned to the master CC-Link. Slave stations must be assigned numbers according to the number of occupied stations so they are not duplicated.
3	Slave station	General term for any station except the master station.
4	Number of occupied slaves	Number of networked stations in use by a slave. Depending on the data, one to four stations can be set. The remote I/O only occupies one station.
5	Remote I/O	A station which can only use digital data. Occupies only one station. (Example: digital units, solenoid valves, sensors, etc)

Mounting and Installation

■ Communication wiring

The connection between a CC-Link-dedicated cable and an SI unit communication terminal for CC-Link is shown below.

(1) Be sure to connect a signal line to its dedicated terminal. (Refer to Fig.1)

Tighten it securely with a torque of 0.5 to 0.6 [Nm].

The terminal screws are M3 size, cross recessed head machine screw.

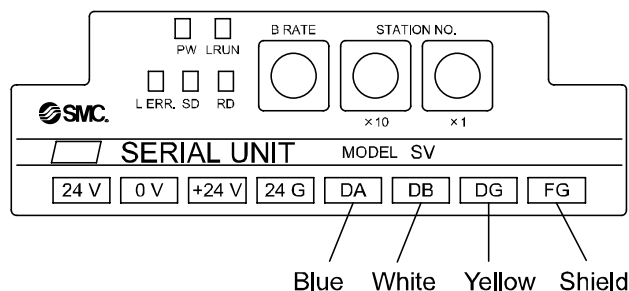


Fig.1

(2) Be sure to connect a terminating resistor between “DA” and “DB” at both ends of the CC-Link system (Refer to Fig.2).

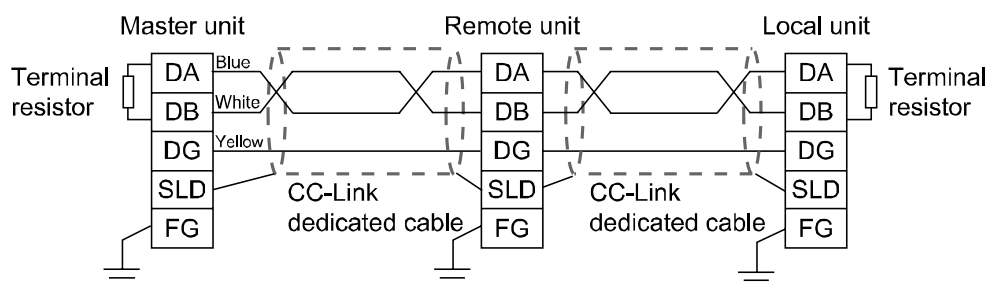


Fig.2

The appropriate terminal resistor differs depending on the CC-Link cable used. (Refer to the table and Fig. 3 below.)

Cable type	Terminal resistor
CC-Link detected cable	110 Ω 1/2 W (Brown, Brown, Brown)
CC-Link dedicated cable compatible to Ver.1.10	
CC-Link dedicated high performance cable	130 Ω 1/2 W (Brown, Orange, Brown)

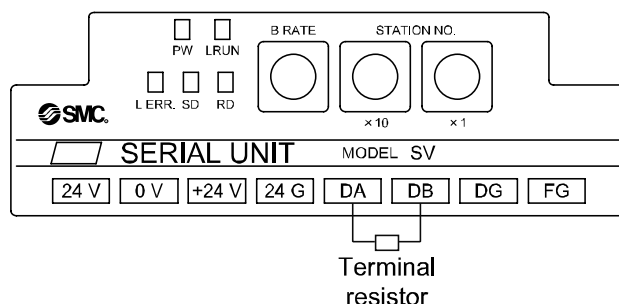


Fig.3

The terminal resistor which is attached with each CC-link master is available.

Use a cable with the same specifications as a CC-Link-dedicated cable. If a cable with any other specifications is used, normal data transmission cannot be guaranteed.

(3)The CC-Link-dedicated cable's shield line (SLD line) should be connected to the "FG" terminal of the SI unit.
 "SLD terminal" and "FG terminal" of EX12#-SMJ1 are common.
 Connect three wires to "FG terminal" as shown in Figure 4.

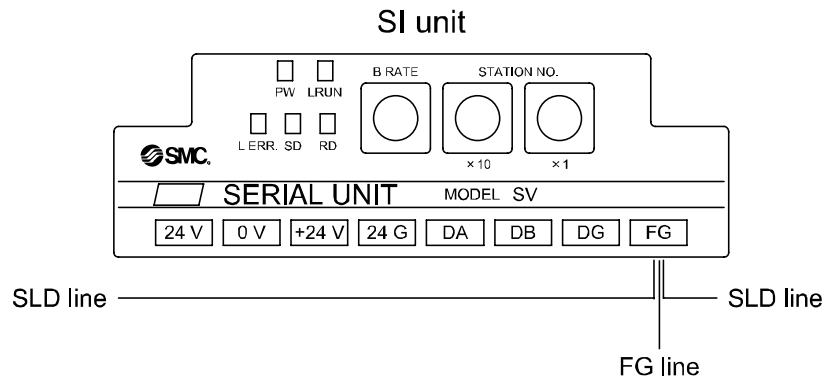


Fig4. Wiring to the FG terminal on the SI unit

When connecting three wires to "FG terminal", crimp two wires together to one crimped terminal as shown in Fig.5. Crimp a wire to another crimped terminal.
 After crimping, connect wires so that the back of the two crimped terminals face each other.

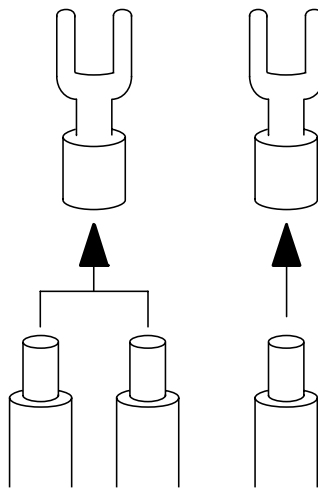


Fig5. How to crimp the terminal

■ Power supply wiring

Connect the power wiring to the SI unit's solenoid valve and communication power supply terminals. Though the power supply consists of two systems, it can operate with either a single or separate power supplies.

Be sure to connect the power to the dedicated terminal (Refer to Fig. 6).


Tighten it securely with a torque of 0.5 to 0.6 [Nm].

The terminal screws are M3 size, cross recessed head machine screw.

*: Connect the ground terminal to ground. Resistance to ground should be 100 ohms or less.

(The SLD and FG terminals in CC-Link are connected within the SI units.)

A. For single power supply use

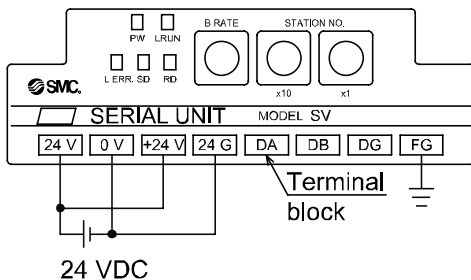

B. For dual power supply use


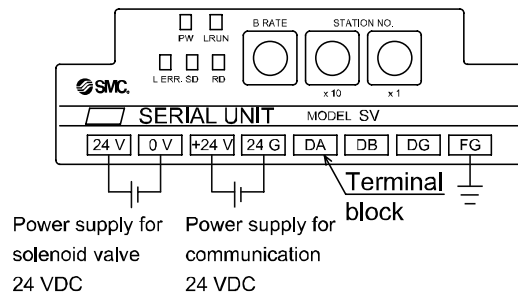


Fig.6

Setting

● Display

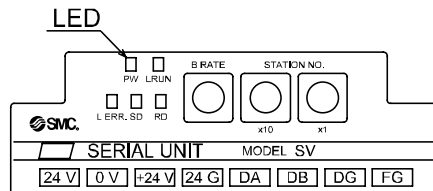


Display	Meaning
PW	It lights up when the communication power is ON
L RUN	Check whether SI unit is communicating with the master station correctly. It lights up when SI unit is receiving normal data from the master station. It goes out for time-out.
SD	It lights up when data is being sent.
RD	It lights up when data is being received.
L ERR.	It illuminates during communication errors (CRC errors). It illuminates during a time-out (the L RUN light extinguishes). It illuminates for station no. setting and communication speed setting errors (the light extinguishes when the setting has been corrected and power has been restored). It blinks when the station no. and communication speed settings have changed during the communication. (the L RUN light illuminates and the SI unit operates according to the station no. and communication speed settings input when power is applied.)


If data link is correct, "PW", "LRUN", "SD", and "RD" light up.

•Switch setting

- The setting for station no. and communication speed can be done with rotary switches under the LED and switch cover.
- The setting shall be done when the power for SI unit is turned off.

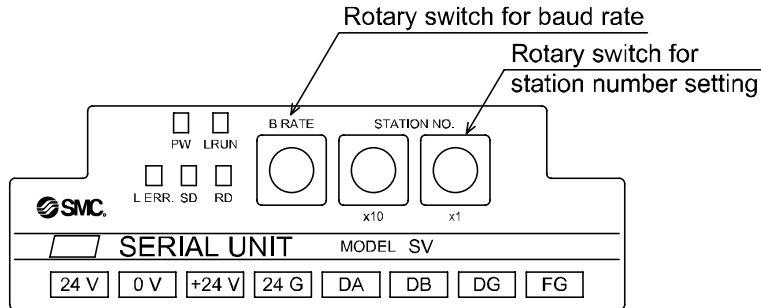


•Station number setting

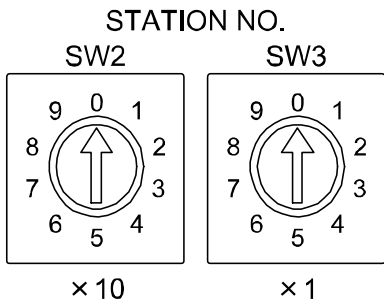

Setting	Setting range
x10	0 to 6
x1	0 to 9

- *: The station no. should be any of the numbers from 01 to 64.
- When numbers 00 or 65 or more is set, "L ERR." will light up.
- *: The station no. cannot duplicate. It will cause mounting condition error.
- *: The setting at shipment is 00.

•Setting of transmitting speed

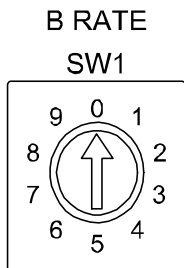

Setting	Transmitting speed
0	156 kbps
1	625 kbps
2	2.5 Mbps
3	5 Mbps
4	10 Mbps

- *: The setting for communication speed should be in range from 0 to 4.
- If the setting is out of the range, "L ERR." will light up.
- After turning the power off, correct the number.
- *: Set the same communication speed as the master station.
- *: The setting at shipment is 0 (156 kbps).

•I/O information and error information.

(1) Buffer memory of master station correspondence table.


Example when SI unit station is assigned to "01".

Buffer area of master station. (QJ61BT11N)		Address Remote Output (RY)																																																		
For station 1	{ 160	RX0F to RX00	<table border="1"> <tr><td>RY00</td><td>Output number 0</td><td>RY10</td></tr> <tr><td>RY01</td><td>Output number 1</td><td>RY11</td></tr> <tr><td>RY02</td><td>Output number 2</td><td>RY12</td></tr> <tr><td>RY03</td><td>Output number 3</td><td>RY13</td></tr> <tr><td>RY04</td><td>Output number 4</td><td>RY14</td></tr> <tr><td>RY05</td><td>Output number 5</td><td>RY15</td></tr> <tr><td>RY06</td><td>Output number 6</td><td>RY16</td></tr> <tr><td>RY07</td><td>Output number 7</td><td>RY17</td></tr> <tr><td>RY08</td><td>Output number 8</td><td>RY18</td></tr> <tr><td>RY09</td><td>Output number 9</td><td>RY19</td></tr> <tr><td>RY0A</td><td>Output number 10</td><td>RY1A</td></tr> <tr><td>RY0B</td><td>Output number 11</td><td>RY1B</td></tr> <tr><td>RY0C</td><td>Output number 12</td><td>RY1C</td></tr> <tr><td>RY0D</td><td>Output number 13</td><td>RY1D</td></tr> <tr><td>RY0E</td><td>Output number 14</td><td>RY1E</td></tr> <tr><td>RY0F</td><td>Output number 15</td><td>RY1F</td></tr> </table>	RY00	Output number 0	RY10	RY01	Output number 1	RY11	RY02	Output number 2	RY12	RY03	Output number 3	RY13	RY04	Output number 4	RY14	RY05	Output number 5	RY15	RY06	Output number 6	RY16	RY07	Output number 7	RY17	RY08	Output number 8	RY18	RY09	Output number 9	RY19	RY0A	Output number 10	RY1A	RY0B	Output number 11	RY1B	RY0C	Output number 12	RY1C	RY0D	Output number 13	RY1D	RY0E	Output number 14	RY1E	RY0F	Output number 15	RY1F	-(Unusable)
RY00	Output number 0	RY10																																																		
RY01	Output number 1	RY11																																																		
RY02	Output number 2	RY12																																																		
RY03	Output number 3	RY13																																																		
RY04	Output number 4	RY14																																																		
RY05	Output number 5	RY15																																																		
RY06	Output number 6	RY16																																																		
RY07	Output number 7	RY17																																																		
RY08	Output number 8	RY18																																																		
RY09	Output number 9	RY19																																																		
RY0A	Output number 10	RY1A																																																		
RY0B	Output number 11	RY1B																																																		
RY0C	Output number 12	RY1C																																																		
RY0D	Output number 13	RY1D																																																		
RY0E	Output number 14	RY1E																																																		
RY0F	Output number 15	RY1F																																																		
	{ 161	RY1F to RY10																																																		
For station 2	{ 162	RY2F to RY20																																																		
	{ 163	RY3F to RY30																																																		
For station 3	{ 164	RY4F to RY40																																																		
	{ 165	RY5F to RY50																																																		
For station 4	{ 166	RY6F to RY60																																																		
	{ 167	RY7F to RY70																																																		
For station 5	{ 168	RY8F to RY80																																																		
	{ 169	RY9F to RY90																																																		
For station 6	{ 16A	RYAF to RYA0																																																		
	{ 16B	RYBF to RYB0																																																		
	⋮	⋮																																																		
	⋮	⋮																																																		

0: Valve OFF
1: Valve ON

(2) Output number assignment

The output number refers to the D side solenoid position on the manifold and starts at zero.

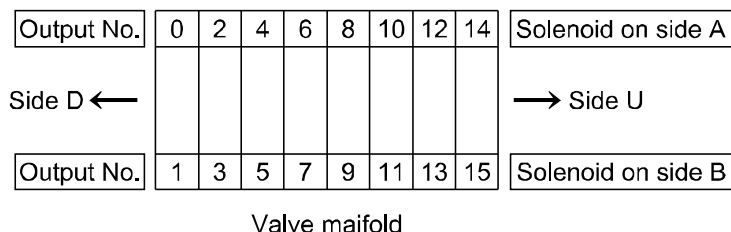


*: Standard wiring on the manifold is for double-solenoid valves and output number starts A side and B side in that order as shown in the figure a.

If you mount a single-solenoid valve on the standard wiring manifold, output number for B side valve is skipped.

*: Custom wiring for mixed mounting single-solenoid valves and double-solenoid-valves can be specified with a Wiring Specification Sheet. Example wiring is shown in the figure b.

*: Bit status "0" and "1" on a data corresponds solenoid valve status ON and OFF (0: OFF, 1: ON) , and output number starts at zero from LSB (least significant bit).

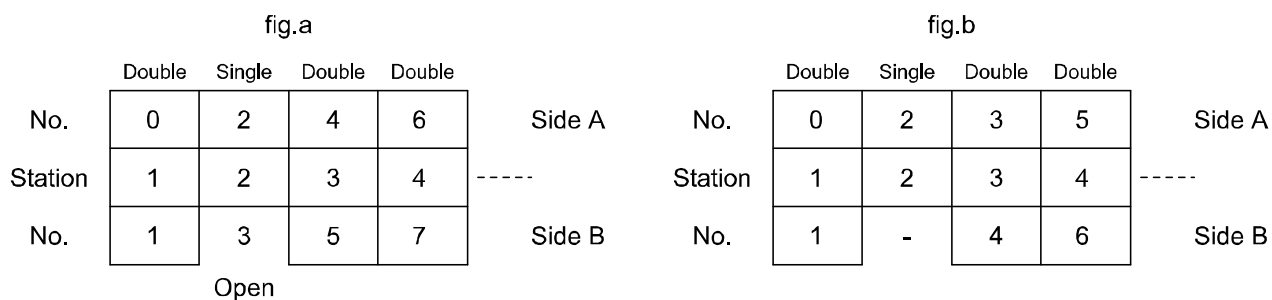

(3) Fuse disconnection information

SI unit solenoid valve power fuse disconnection can be recognized by the link special register at master station.

0: Normal

1: Fuse disconnected

Buffer area of master station.

(QJ61BT11N)

	b15	b14	b13	b12	...	b3	b2	b1	b0
(688 _H) SW0088	16	15	14	13	...	4	3	2	1
(689 _H) SW0089	32	31	30	29	...	20	19	18	17
(68A _H) SW008A	48	47	46	45	...	36	35	34	33
(68B _H) SW008B	64	63	62	61	...	52	51	50	49

1 to 64 shows station number. Bits of occupied station turn on.

Maintenance

•Mounting and wiring

Item to inspect	Criteria	Countermeasure
Are SI unit terminals (for communication and power supply) securely connected?	No looseness.	Tighten the connector. (Refer to "Mounting/ Installation")
Are the terminating resistance securely connected to the both ends of the network (in case this system is at the end of the network)	Terminating resistors are connected.	Connect suitable terminating resistors to cables (Refer to "Mounting /Installation").
Isn't the connecting cable broken.	No apparent breaks	If any visible breaks are found, replace the cable.

•Replacement parts

Item to inspect	Criteria	Countermeasure
CC-Link dedicated cable	No appearance error	If any visible breaks are found, replace the cable.
SI unit	No error in operation and display	If it does not operate as intended, or the display indicates errors, replace the unit.

•Power supply


Item to inspect	Criteria	Countermeasure
Measure voltage at both ends of the power supply for communication to ensure it is within the specified range.	15 VDC to 30 VDC	Investigate into the cause of voltage fluctuation, and take a countermeasure against it.
Measure voltage of the power supply for solenoid valve to ensure it is within the specified range.	24 VDC +10%/-5%	Investigate into the cause of voltage fluctuation, and take a countermeasure against it.

•Fuse exchange (Only EX126D-SMJ1)

When over current is applied to power for communication and power for solenoid valve due to short or others, fusing causes power supply stopped. In this case, solve the problem such as short and replace the fuse. Replacing should be performed with assembly with manifold unit base released, and under the condition of single SI unit.

Fuse is positioned on both side of connector on the bottom face of SI unit housing.

Fuse model: EX9-FU20

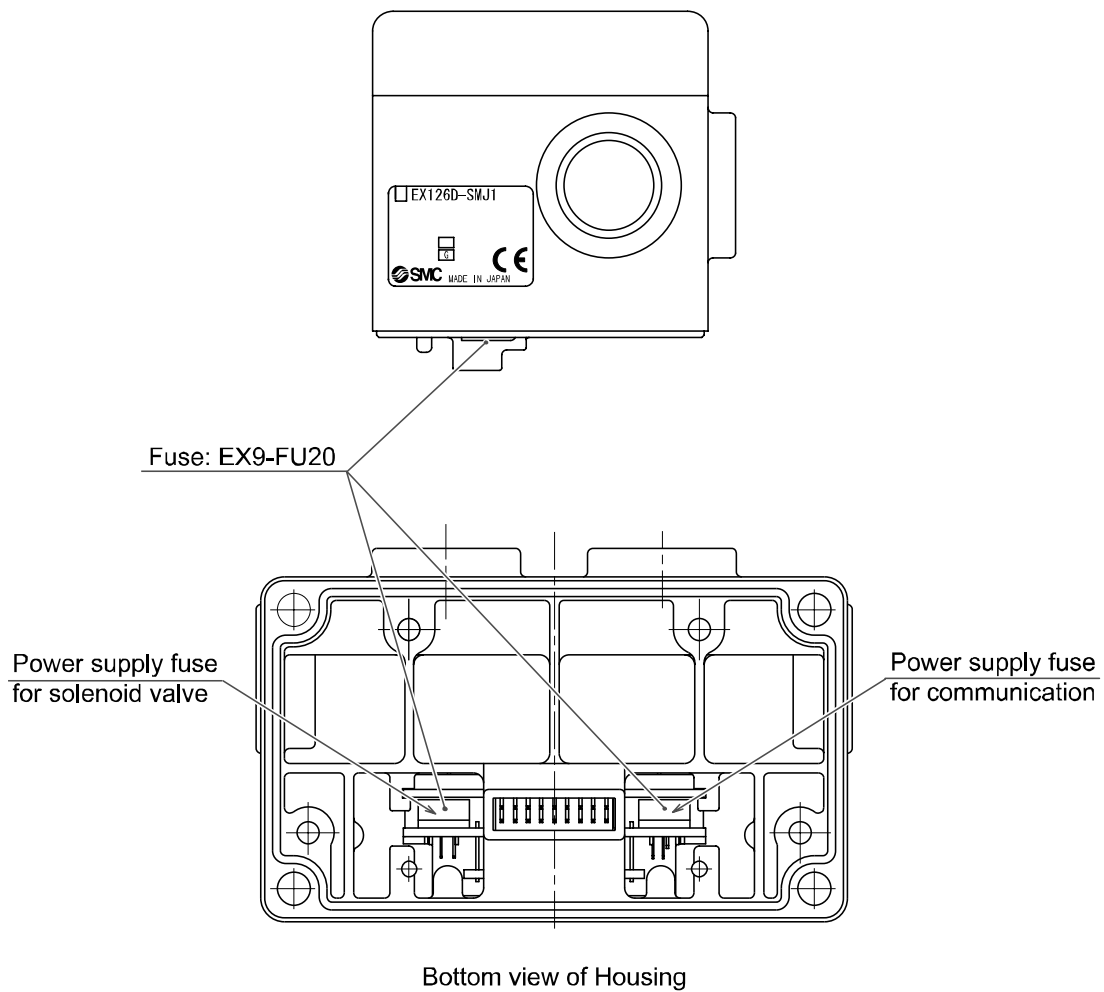

Troubleshooting


•Troubleshooting

Applicable model: EX12*-SMJ1

If a SI unit gets an operation failure, look for the problem using the following flow chart.

If any cause of the problem cannot be found, and a new SI unit can operate well after replaced with the old one, the failure of SI unit is conceivable. As the failure of SI unit may happen due to the operation environment (network construction etc), consult us about the countermeasure against that case.

If neither cause of the problem nor failure of SI unit can be found, inconsistency between parameter setting and the network construction at the master station is conceivable. In this case, refer to "Troubleshooting" in a user's manual (CC-Link system) by Mitsubishi.

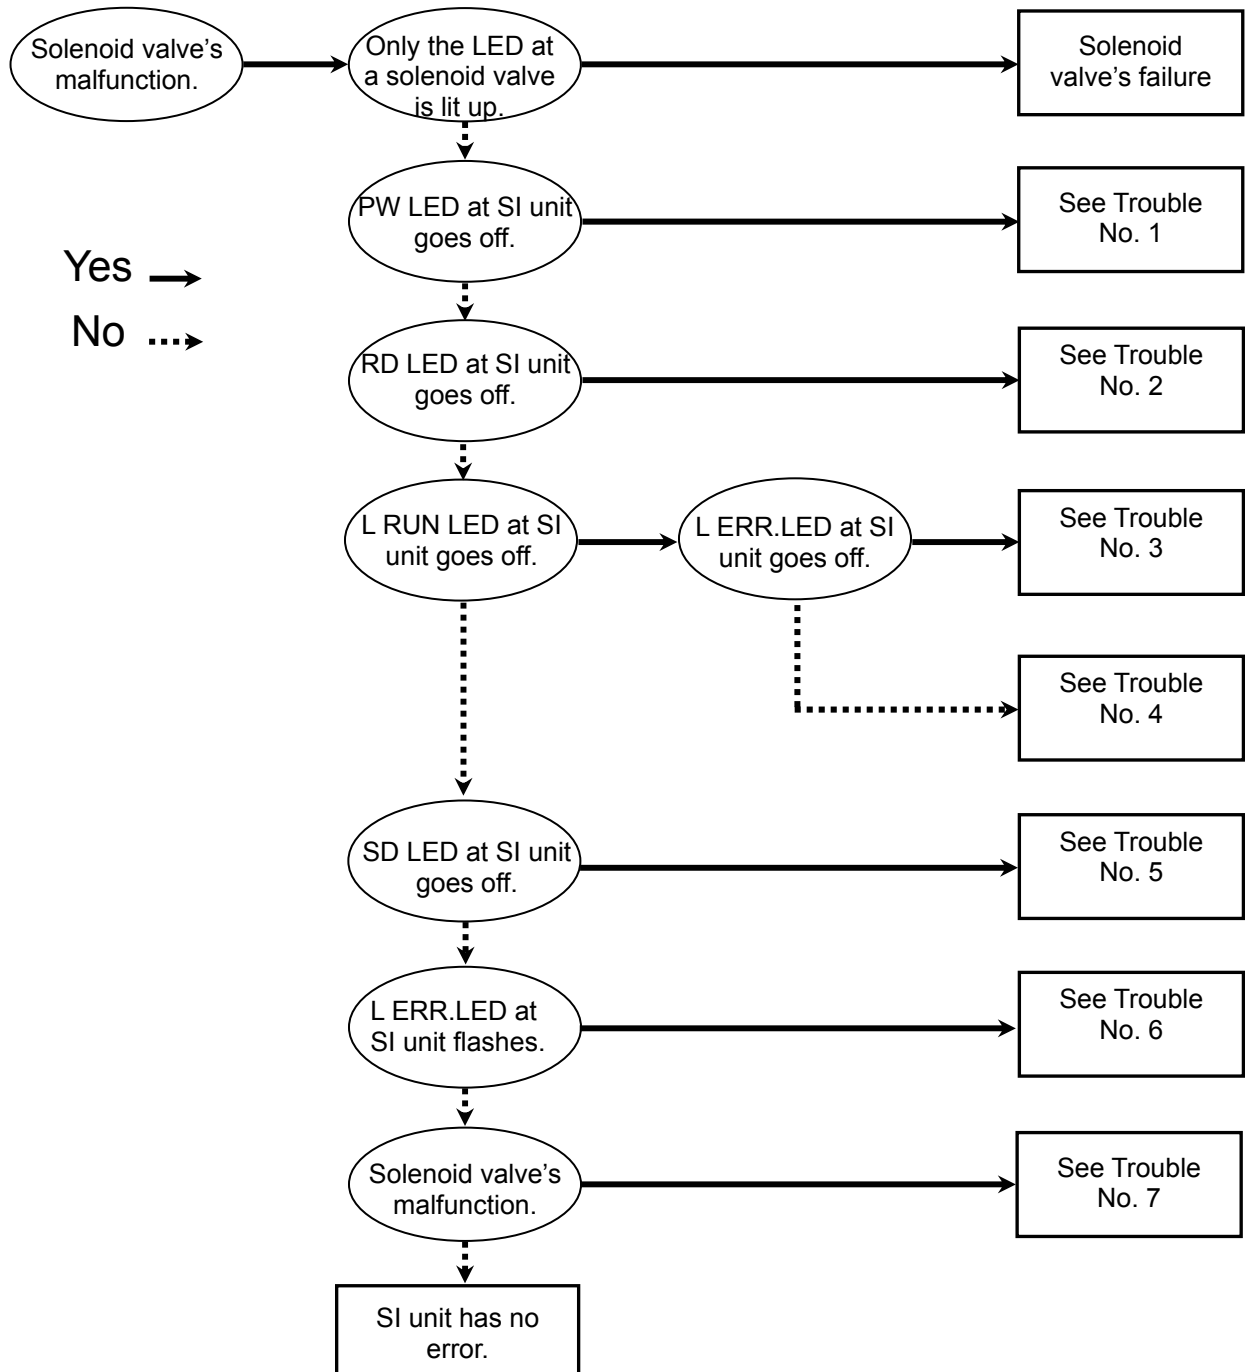

•Cross-reference troubleshooting

Trouble No.	Problem	Possible cause	Investigation method	Countermeasure
1	PW LED at SI unit goes off.	Power supply for communication wiring failure.	Check the power supply for communication cables for breaks. Also check the terminal between the power supply cable and connector for looseness. Avoid repetitive bending and pulling of the cable, which causes breakage.	Connect the power supply cable correctly.
		Power supply for communication failure.	Check the power supply for communication wiring for any error.	Correct the wiring.
			Check the power supply for communication voltage.	Supply 24 VDC +10%/-5% to power supply for communication.
2	PW LED at SI unit is lit up. RD LED at SI unit goes off.	Communication line wiring failure.	Check the communication line cable for breaks. Also check the terminal between the communication cable and the connector for looseness. Avoid repetitive bending and pulling of the cable, which causes breakage.	Connect the power supply cable correctly.
			Check the communication line wiring for any error.	Correct the wiring.
3	L RUN LED at SI unit goes off. L ERR.LED at SI unit goes off.	Master station's power supply failure.	Check the power is supplied to the master station.	Check the power is supplied to the master station.
		Communication failure.	Check the existence of equipment and high voltage line, which cause noise, around the communication and power supply lines.	Separate the communication and power supply cables from the noise sources.
		Station number setting failure.	Ensure there is no difference between the SI unit station number setting and the station data at the master station.	Correct the setting.
		Communication speed setting failure.	Ensure there is no difference between the SI unit and master station communication speed settings.	

Trouble No.	Problem	Possible cause	Investigation method	Countermeasure
4	L RUN LED at SI unit goes off. L ERR.LED at SI unit is lit up.	Station number setting failure. Station number duplicating failure.	Ensure there are no errors or duplications of the station numbers.	Correct the setting. To review the setting method, see "Settings".
		Communication speed setting failure.	Ensure the communication speed is set correctly.	
5	L RUN LED at SI unit is lit up. SD LED at SI unit goes off.	Communication speed setting failure.	Check there is no difference between the set communication speed at SI unit and the set communication speed at the master station.	Correct the setting.
		Station number setting failure. Station number duplicating failure.	Check that the set station numbers contain no errors or duplication.	
6	L RUN LED at SI unit is lit up. L ERR.LED at SI unit flashes.	Failure in changing communication speed	Check that the communication speed setting has not changed after supplying power to the power supply for communication.	Cut the power supply for communication, and supply the power again after correcting the setting.
		Changed station number setting.	Check that the station number setting has not changed after supplying power to the power supply for communication.	
		Communication failure.	Check the existence of equipment and high voltage line, which cause noise, around the communication and power supply lines.	Separate the communication and power supply cables from the noise sources.

Trouble No.	Problem	Possible cause	Investigation method	Countermeasure
7	Solenoid valve malfunction.	Solenoid valve failure.	Check the operation with another solenoid valve, or check the troubleshooting for a solenoid valve.	Check the troubleshooting for a solenoid valve, or consult our responsible division.
		Connection failure between SI unit and manifold solenoid valves.	Check the connector between SI unit and manifold solenoid valves for the connection failure such as a bent pin	Correct the connection between SI unit and manifold solenoid valves.
		Solenoid valves whose total output points are 16 or more malfunction.	Check the total output points of the solenoid valves connected to a manifold are 16 or less.	As EX120 series, max. output points are 16, the output points must be 16 or less.

Specification



■ Specifications

Item		Specifications				
Communication specification	Applicable system	CC-Link Ver.1.10				
	Occupied station	1 station				
	Station number setting range	1 to 64 (Set with a rotary switch)				
	Station type	Remote I/O				
	Communication speed	156 kbps	625 kbps	2.5 Mbps	5 Mbps	10 Mbps
	Cable length between stations	20 cm or more				
	Max. cable length	1200 m	900 m	400 m	160 m	100 m
Communication power voltage	15 VDC to 30 VDC					
Solenoid valve voltage	24 VDC +10%/-5%					
Number of outputs	16 points					
Output type	NPN (positive common)					
Connection load	SMC: Solenoid valve with light/surge voltage suppressor (24 VDC, 2.1 W or less)					
Output when communication error occurs	Clear					
Current consumption	Power supply for communication: 24 VDC/0.1 A or less Power supply for solenoid valve: 24 VDC /1.5 A or less					
Environ. resistance	Enclosure	EX120/121/122: IP20, EX124U/D: IP65, EX126D: IP67				
	Withstand voltage	1500 VAC 1min. (Between FG and external terminal)				
	Insulation resistance	2 MΩ or more (500 VDC between FG and external terminal)				
	Ambient temperature	Operating temperature: 0° to +55 °C (when 8 points are on) 0 °C to +50 °C (when 16 points are on) Storage: -10 °C to 60 °C				
	Ambient humidity	35% to 85%RH (No due condensation)				
	Pollution degree	For use in Pollution Degree 2 Environment				
	Operating environment	No corrosive gas				
Standard	CE marking					
Weight	EX120: 110 g or less EX121: 140 g or less EX122: 130 g or less		EX124U/D: 240 g or less EX126D : 360 g or less			



● Applicable valve series

Number	Valve series	Enclosure	Mounting	Valve interface
EX120-SMJ1	SV1000/2000/3000/4000 VQ1000/2000 SY3000/5000	IP20	Direct	Plug-in
EX121-SMJ1	SY3000/5000		DIN rail	Flat ribbon cable
EX122-SMJ1	SY3000/5000			
EX124U/D-SMJ1	VQ2000/4000/5000	IP65	Direct	Plug-in
EX126D-SMJ1	SY3000/5000 SV1000/2000/3000 VQC1000/2000/4000	IP67		


■Dimensions
 ●EX120-SMJ1

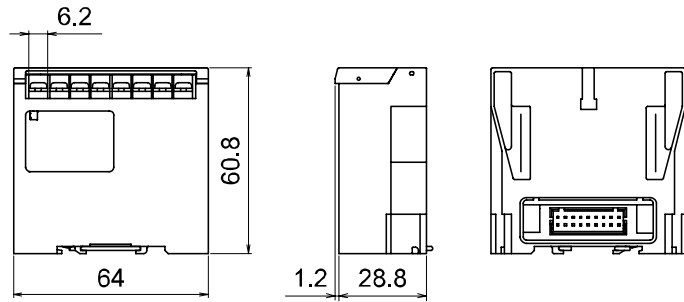


●EX121-SMJ1

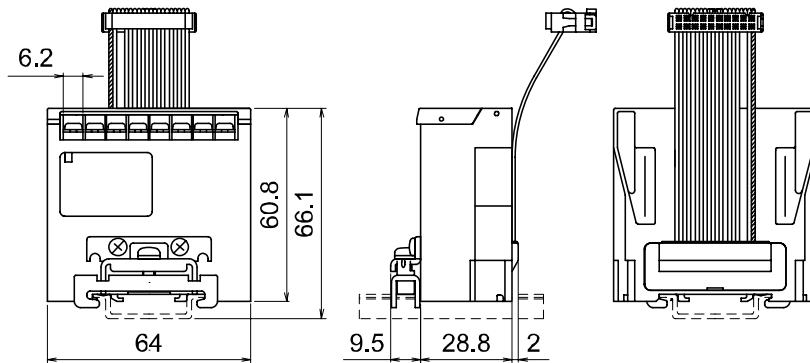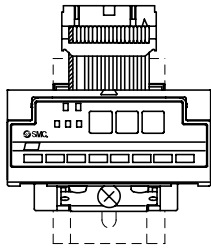


•EX122-SMJ1

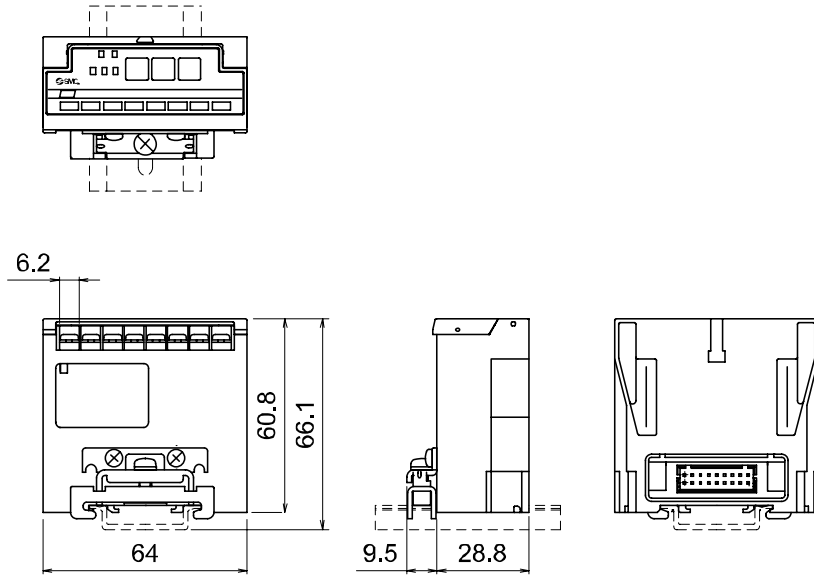

•EX124D/U-SMJ1

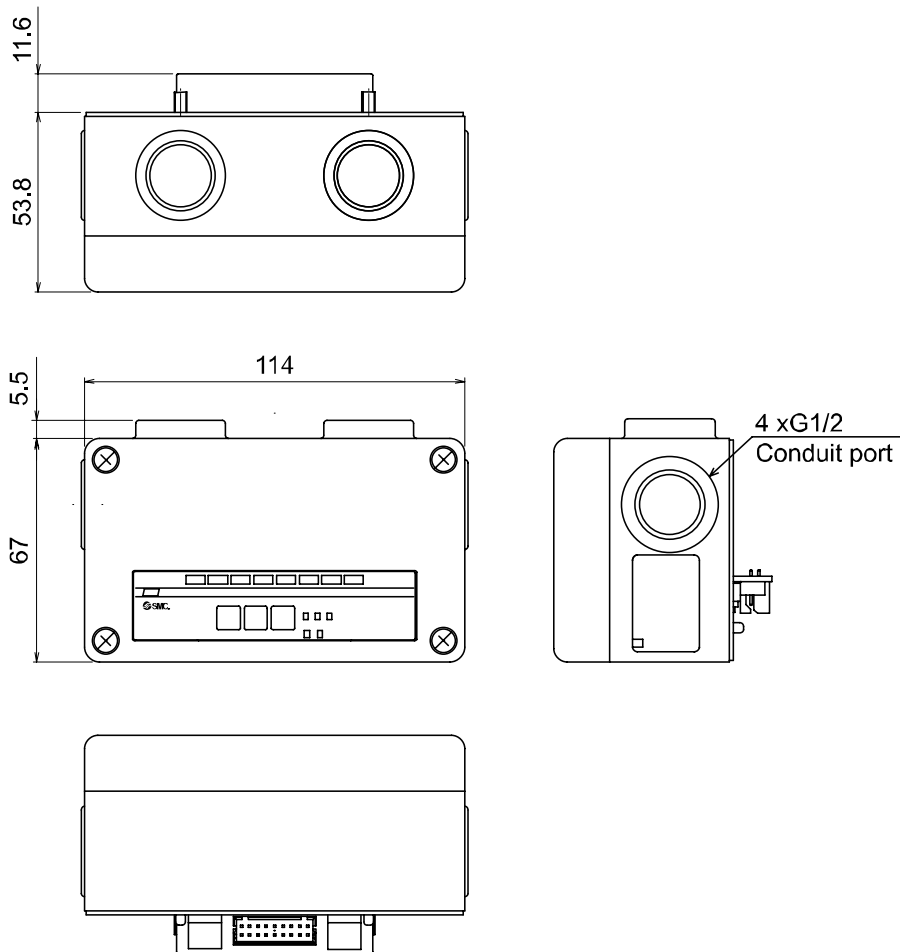

•EX126D-SMJ1

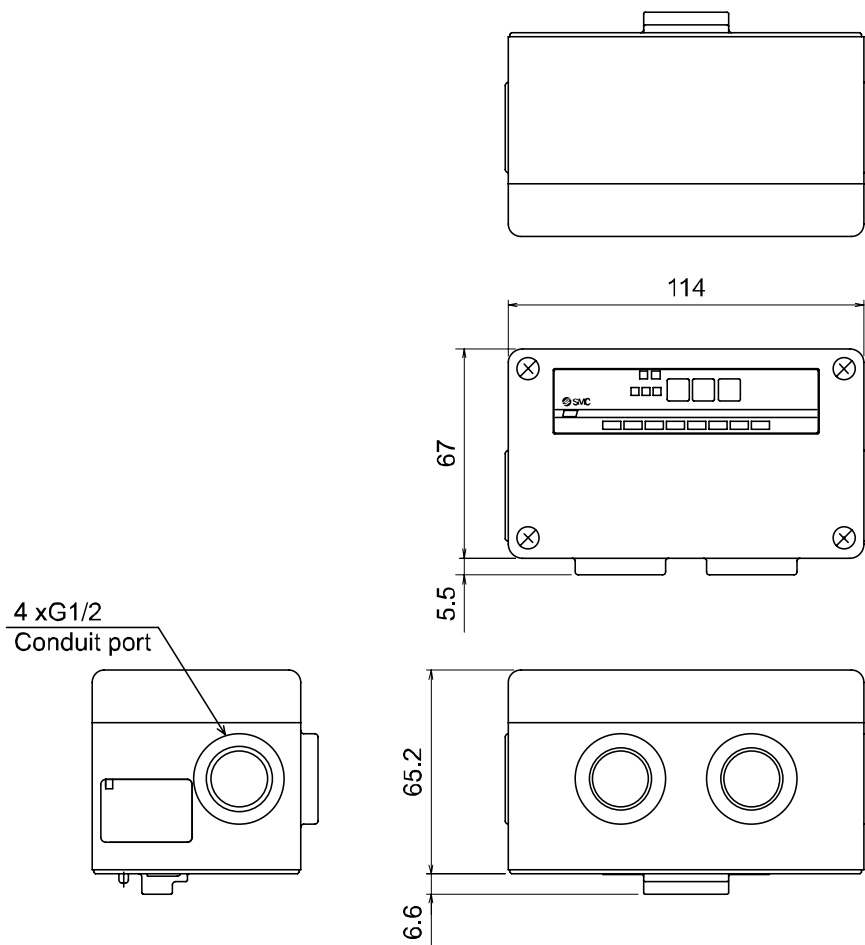

Revision history
C: Complete revision.

SMC Corporation

Akihabara UDX 15F,
4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN
Phone: +81 3-5207-8249 Fax: +81 3-5298-5362
URL <http://www.smcworld.com>

Note: Specifications are subject to change without prior notice and any obligation on the part of the manufacturer.
© 2010 SMC Corporation All Rights Reserved

